


FOUNDATION DETAILS

INSTALLING PROCEDURE:
 INSTALL STANDARD ON LEVELING NUTS. PLUM STANDARD AND TIGHTEN HOLD-DOWN NUTS. APPLY LATEX CONCRETE GROUT UNDER POLE FLANGE AND FINISH SIDES WITH SLIGHT BEVEL.

1" MIN TO 2" MAX SPACE BETWEEN BOTTOM OF POLE FLANGE & TOP OF PAD OR CONCRETE MEDIAN

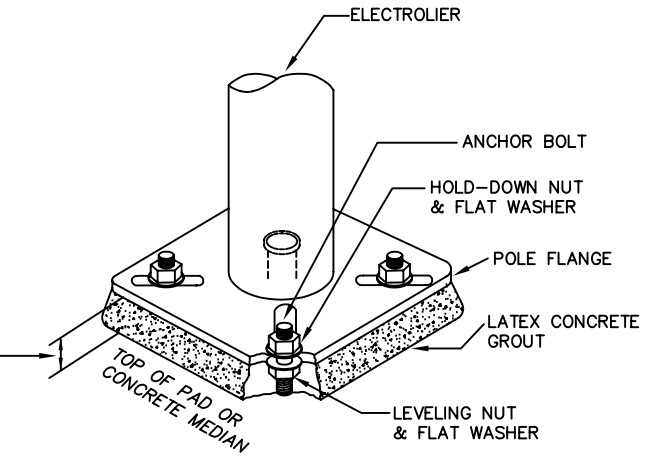

INSTALLATION OF STANDARD ON FOUNDATION

NOTE: THIS PLAN IS NOT A LEGAL ENGINEERING DOCUMENT BUT AN ELECTRONIC DUPLICATE. THE SIGNED CITY OF OAKLAND STANDARD DETAILS FOR PUBLIC WORKS CONSTRUCTION IS AVAILABLE FOR PURCHASE FROM THE CONTRACT ADMINISTRATION DEPARTMENT.

<p>CITY OF OAKLAND</p>	<p>DESIGN AND CONSTRUCTION SERVICES DEPARTMENT</p>
	<p>BORED-HOLE FOUNDATION ELECTROLIER IN MEDIAN SHEET 1 OF 2</p>
<p>ELECTRICAL SERVICES MANAGER</p>	
<p>DATE: <u> OCT 95 </u> REV. DATE: <u> AUG 99 </u></p>	<p>DRWG. E-26</p>