


INSTALL P46 SET SCREW ONLY AFTER MOUNTING HAS BEEN ORIENTED --- USE DRILL GUIDE AND DRILL 1/4" DIA. HOLE IN STANDARD TO TAKE DOG POINT

PLUG EACH UNUSED 1-1/2" IPS-TAPPED HOLE IN AI ADAPTER WITH 1-1/2" PLUG (F28)

- * USE A42 TIE BRACE, N6 & N32-1/4 NIPPLES WITH ALL MOUNTINGS EXCEPT T-2P.
- ** USE A43 TIE BRACE, N8 & N17-3/4 NIPPLES WITH T-2P MOUNTING ONLY.

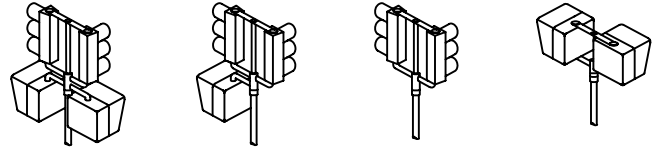

T-2V-2P 10' STD. **T-2V-1P** 10' STD. **T-2V** 10' STD. **T-2P** 7'-8" STD.

NOTE: THIS PLAN IS NOT A LEGAL ENGINEERING DOCUMENT BUT AN ELECTRONIC DUPLICATE. THE SIGNED CITY OF OAKLAND STANDARD DETAILS FOR PUBLIC WORKS CONSTRUCTION IS AVAILABLE FOR PURCHASE FROM THE CONTRACT ADMINISTRATION DEPARTMENT.